


Read this instructions before operation

Digital Handset Operation

1. Panel

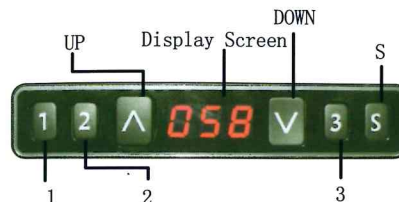

USER OPERATION INSTRUCTION

3. Move up and down

Step	Operation	Motion
1	Press and hold \wedge	Legs move up
2	Release \wedge	Legs stop
3	Press and hold \vee	Legs move down
4	Release \vee	Legs stop

3

6. Toggle the display unit format

Step	Operation	Motion
1	Press and hold button S, then press and hold \vee , keep for about 3 seconds	The height information will be changed between centimeters and inches
2	Release the buttons	completed

In inch format, the minimum height variation as the legs move up or down is 0.5 inches, while in centimeter format is 1 centimeter.

6

4. Set memory positions

Step	Operation	Motion
1	Press and hold \wedge or \vee , then release	Run the legs to the position you want the table surface to be
2	Click button S, then click button 1, 2 or 3 within next 3 seconds	Position 1, 2 or 3 is saved

1

4

7. Verify the display switch data to table height

Step	Operation	Motion
1	Set the table at any height, recommended at the bottom position	Measure the table actual height and write down the number in inches or in centimeters
2	Press and hold button S, then press and hold \wedge , keep for about 3 seconds	The first number starts flashing on the screen
3	Release the buttons, then click \wedge or \vee to change the first number	The first number is being increased or decreased to the first number you measured
4	Click button S	The second number is flashing on the screen

7

2. Initialization procedure

Step	Operation	Motion
1	Press and hold \wedge & \vee simultaneously for more than 3 seconds	Legs begin to move down at half speed of normal operation
2	Keep pressing \wedge & \vee	Legs move down to the lowest position and rebound 2-5 mm, then stop
3	Release \wedge & \vee together	Initialization is completed

The initialization procedure must be completed before the first running after table is installed or parts are replaced.

2

5. Move to the memorized positions

Step	Operation	Motion
1	Press and hold the button 1, 2 or 3	Legs return to the corresponding position saved

5

5	Click \wedge or \vee to change the number	The second number is being increased or decreased to the second number you measured
6	Click button S	The third number starts flashing on the screen
7	Click \wedge or \vee to change the number	The third number is being increased or decreased to the third number you measured
8	Click button S	Completed

Check the switch display format in inches or in centimeters and toggle to the unit you like and match to the actual measurement. In inch format, the minimum adjustable height is 0.5 inches, while in centimeter format is 1 centimeter.

8

8.Lock the stroke

Step	Operation	Motion
1	Press and hold ▲ or ▼, then release	Run the legs to the position you want the table surface to be
2	Press and hold button S, then press and hold 1, keep for about 3 seconds	Letter “L” is indicated on the screen. That means the position is locked at the lowest position that the table can be moved to
3	Release the buttons	Completed

- 1.Legs aren't able to run below the locked position
- 2.Memory position(s) are/is below the locked position will be lost even after the table is unlocked, you need to follow SET MEMORY POSITIONS again to reset these memory positions .

9

2	Keep pressing ▲ & ▼	Legs move down to the lowest position and rebound 2-5 mm, then stop
3	Release ▲ & ▼ together	Initialization is completed

The initialization procedure must be completed before the first running after table is installed or parts replaced

3.Move up and down

Step	Operation	Motion
1	Press and hold ▲	Legs move up
2	Release ▲	Legs stop
3	Press and hold ▼	Legs move down
4	Release ▼	Legs stop

12

Address: No.4, East Jiangcun Road,
Henglin town,
Changzhou city,
Jiangsu Prov,
China
Postcode: 213101
Tel: 0086-519-67898510
Fax: 0086-519-67898517
www.czkaidi.cn

865600033

9.Unlock the stroke

Step	Operation	Motion
1	Press and hold button S, then press and hold 2, keep about 3 seconds	Letter “C” is indicated on the screen. That means the table is unlocked and can be moved in full range
2	Release the buttons	Completed


10

Trouble Shooting

Fault Phenomenon	Solution
After connecting the power, press up or down, the legs have no response.	Re-initialize the table; Check if the connection is correct or not; Please contact your supplier.
After connecting the power, press and hold up & down together, the legs have no response.	Check if the connection is correct or not; Please contact your supplier.
The legs rising slowly.	Check if the input power is correct or not; Please contact your supplier
The legs don't move according	Please contact your supplier.

13

Connect Instruction

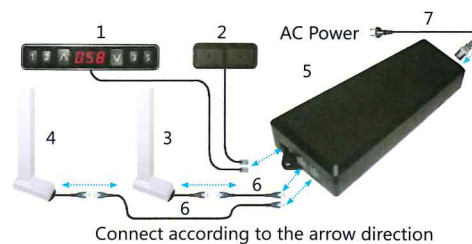

1/2	Digital/Two-key Handset	Select one of the handsets and connect
3&4	Legs of desk	Connect the legs with the control box
5	Two-leg Control Box	Please check the power outlet voltage according to the lable on the control box
6/7	Connecting Wire /Power Wire	Connect according to the arrow direction

15

Two-Key Handset Operation

1. Panel



2.Initialization procedure


Step	Operation	Motion
1	Press and hold ▲ & ▼ simultaneously for more than 3 seconds	Legs begin to move down at half speed of normal operation

11

to your operation.	
One leg moves while the other leg does not move.	Check if the connection is correct or not; Please contact your supplier.
Legs only move down and don't move up.	Re-initialize the table; Please contact your supplier.
Table slides down itself.	Check if the weight of the load on the table exceeds 75KG or not; Please contact your supplier.
The table goes into initialization frequently.	Check if the weight of the load on the table exceeds 75KG or not; Check the noise of the motor; Please contact your supplier.

14

Connect Instruction

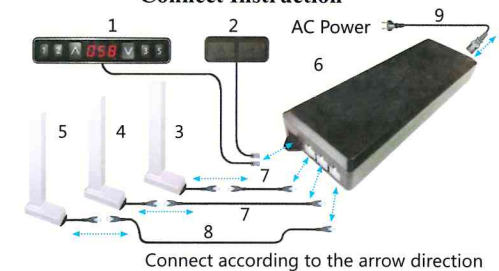

1/2	Digital/Two-key Handset	Select one of the handsets and connect
3&4&5	Legs of Desk	Connect the legs with the control box
6	Three-leg Control Box	Please check the power outlet voltage according to the lable on the control box
7/8/9	1m Connecting Wire /1.5m Connecting Wire/Power Wire	Connect according to the arrow direction

16